

Coin Counting Application: Smart+



Coin counting is standard operation for casino gambling, banking, vending and toll collection businesses. METTLER TOLEDO has a long history of participating in this market with our two levels of coin counting scales: the hard count scales like the 9183 and change kiosk scales like the 8582 Coin Counter and the Viper Coin Counter.

With the 4-Series Smart+ we have increased product functionality and the flexibility to meet the requirements of transactional coin counting. As the successor to the Viper Coin Counter, the 4-Series "Smart+" count counter inherits the superior weighing performance of the Viper scale, some say the 4-Series weighs even better than Viper, and expands on the functionality.


METTLER TOLEDO has implemented the feature of "factor on piece", which means we can now factor \$ dollar amount onto the piece count, instead of the weight. Along with other enhancements in the 4-Series, all setup can be done in the field. Of course, "factory", setup to the standard Coin Count configuration can be provided for a nominal price adder so the application is ready run "out of the box"!

No More Custom Software!


The standard application setup is just the foundation, the customizing is up to you, and you have all the power and features of the 4-Series Smart+ to work with!

- Ever want to modify the printed label? – Now you can!
- Ever want Ethernet connectivity – Now you can add it!
- Ever want an ID field? – Now you can setup not just one, but three! That you define!
- Ever want more coin / token articles? – Now you can! Up to 1,500 different articles can be stored in the database!


Here are some photos of the 4-Series Coin Counter.

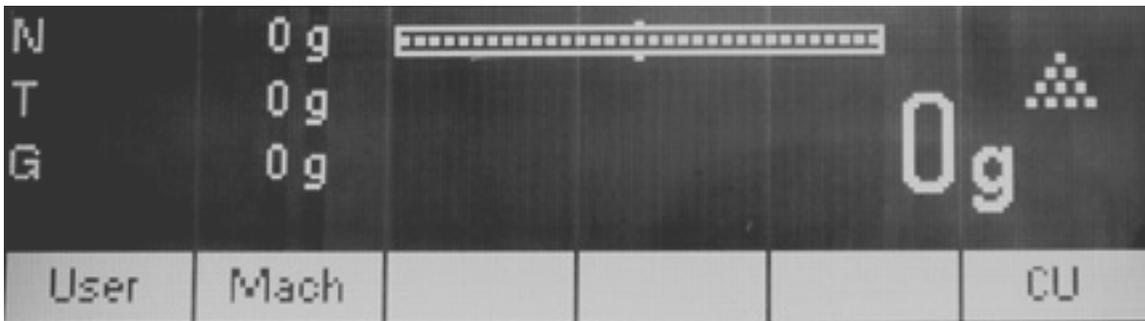

You can change User and Mach(ine) to whatever you want and even add a third ID!

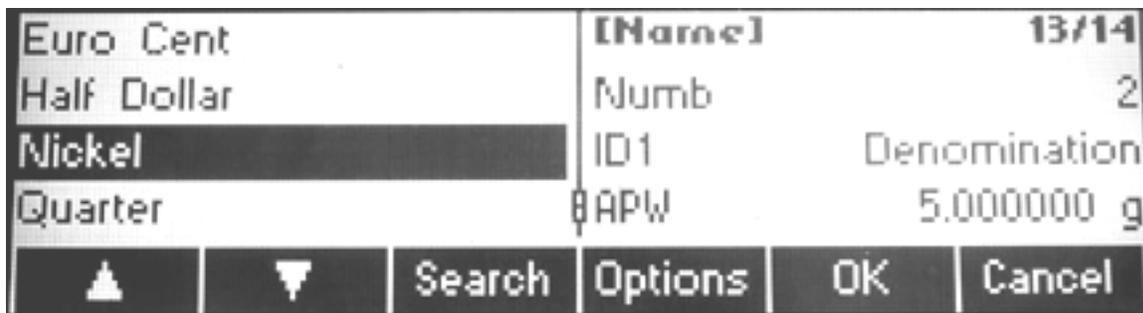

Select the coin/token denomination from the database – you can add additional denominations up to 1,500 maximum!

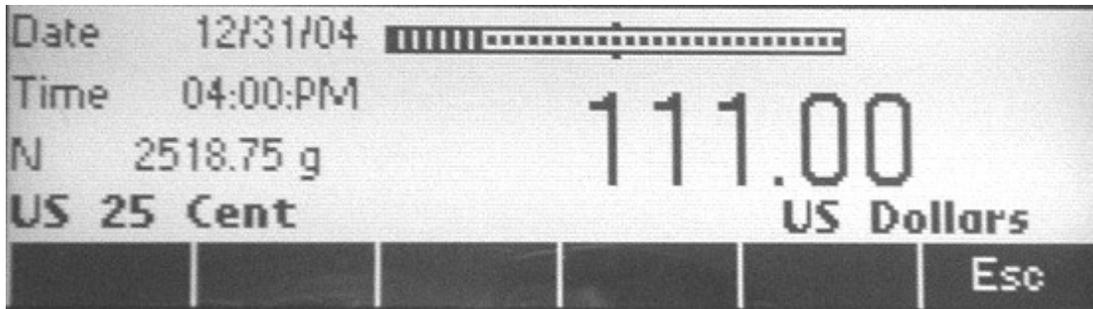

Count and Print!

METTLER TOLEDO, Inc.
 Smart Plus
 Coin Counter Application

02/18/2005 03:41:PM

User ID: Herman
 Mach ID: Slot 123ABC
 Denomination US 25 Cent
 Piece Wt 5.670 g
 Tare Wt. 150.00 g
 Net Wt. 2518.75 g

Amount 111.00 US Dollars

METTLER TOLEDO, Inc.
 Smart Plus
 Coin Counter Application


02/18/2005 03:51:PM

User ID: Herman
 Mach ID: Slot 123ABC
 Denomination 20 Euro Cent
 Piece Wt 5.740 g
 Tare Wt. 150.00 g
 Net Wt. 16050.05 g

Amount 559.20 Euro

For coin applications, you size the scale and go! For Bill counting the 4-Series application is the same, select a MonoBloc scale and create articles for the different currency notes, remember, no more than 1500 different!

The full operating instructions and setup parameters are in a separate document for the Coin Count Application. Document P/N: 17287700A

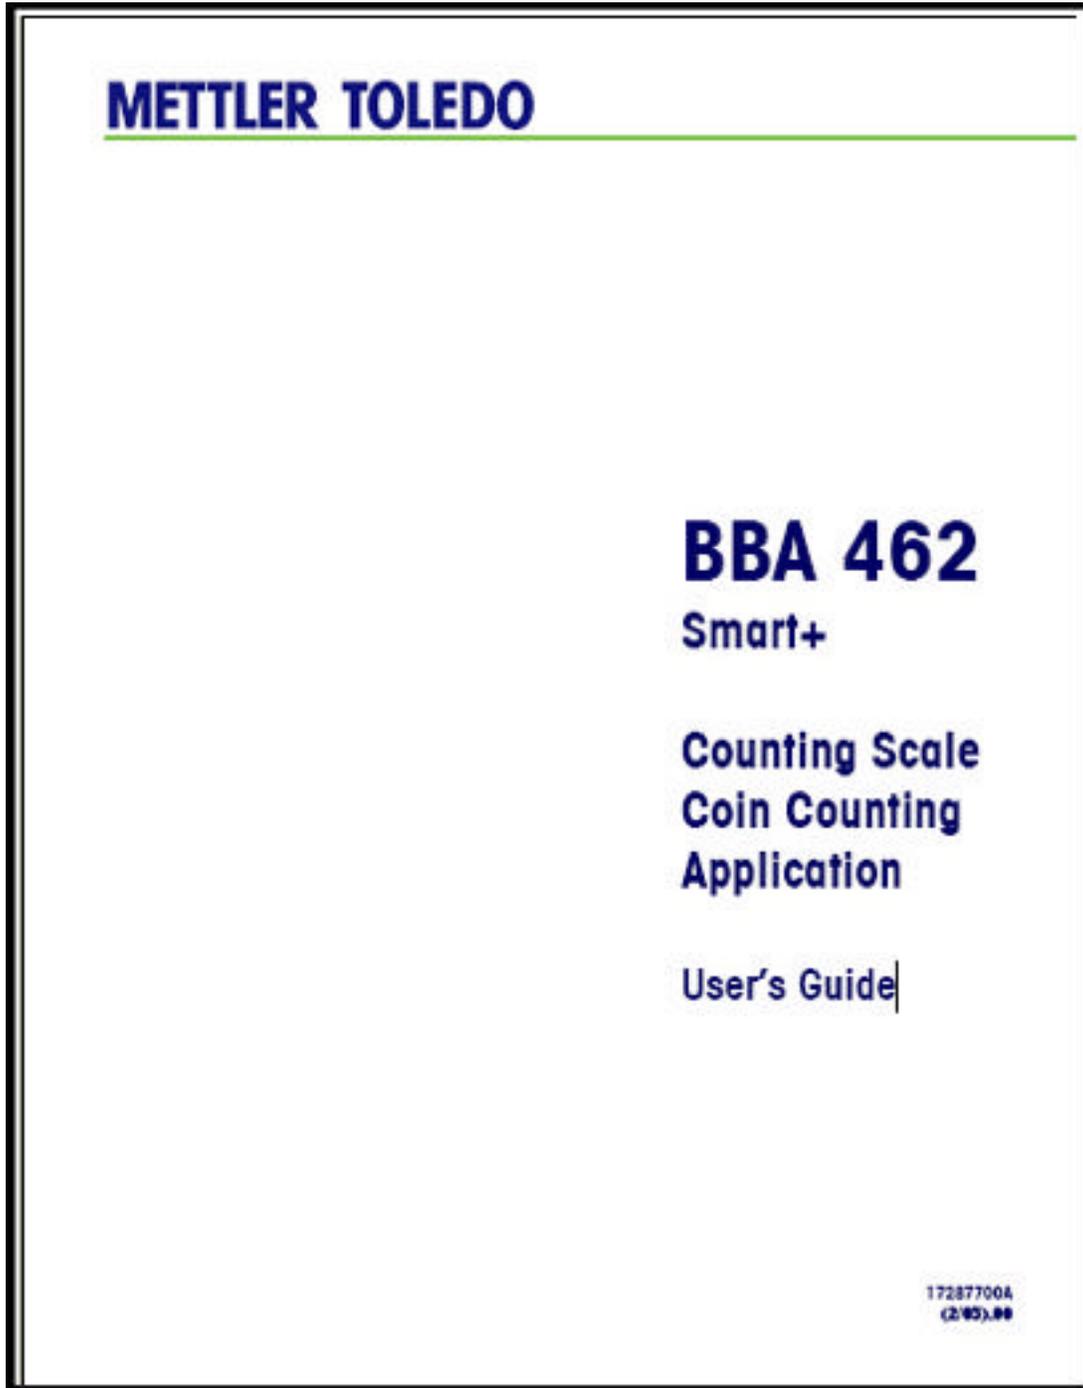

END of demo.