



**2451**

Programmable Hanging Scale/Printer

Standard and Self-Service

**Stainless Steel Compact Design**

**Easy to Use**

**METTLER TOLEDO**

## Take Your Service to New Heights...

- Large Easy to Read Displays
- Stainless Steel, Low Maintenance Construction
- Ideal for Produce, Bulk Foods, Seafood...
- Connect to your existing network
- Available in Standard and Self-Service Versions

The Model 2451 is a compact programmable hanging scale with a built-in thermal label printer that features stainless steel construction.

The stainless steel pan and housing provide long-term environmental protection and superior aesthetic value. The commodity pan meets USDA standards.

### Mettler-Toledo USA

1900 Polaris Parkway  
Columbus, Ohio 43240  
TEL. (800) 883-2171  
(614) 438-4511  
FAX (614) 438-4900



### Mettler-Toledo, Canada

TEL. (800) 263-6593  
FAX (614) 438-4846

### Mettler-Toledo S.A., Mexico

TEL. (525) 547-1634  
FAX (525) 541-2228



### Mettler-Toledo, Australia

TEL. (61) 3 9646 4551  
FAX (61) 3 9645 3935

### International Americas & Caribbean

2250 NW 84th Avenue  
Miami, Florida 33122  
TEL. +01 305 477-4300  
FAX: +01 305 594-6967

### Europe, Africa, Near East, Pacific Rim

TEL. (41) 1 944 2211  
FAX: (41) 1 944 3060

Internet: [www.mt.com](http://www.mt.com)

Specifications subject to change without notice.

©2002 Mettler-Toledo Inc.

METTLER TOLEDO® is a registered trademark of Mettler-Toledo Inc.

Printed in USA

RT1108.OE

The Model 2451 is ideal for stores with limited counter space and is ideal for use in produce, seafood, bulk foods, cheese, and service meat areas. The Model 2451 is available in standard or self-service configurations and in client or standalone versions. The Model 2451 is an improved version of our sheet metal Model 2450 Hanging Scales. All of the features and benefits are the same with the addition of a shorter profile and an exterior of corrosion resistant stainless steel.

The Model 2451 comes standard with an Ethernet Interface allowing you to connect to your existing network. The client version can communicate to a SmartTouch® Master or can be a standalone unit with direct communication to the Scale Management solution at the ISP.

The bright digital displays show the price, product description, and scrolling messages, with indicators compliant with all W&M regulations.




### Integrated Thermal Label Printer

The thermal label printer features a large label capacity and high definition print head. You can print more



Ideal in seafood, produce, bulk foods, candy, cheese, and service meat departments.

legible labels with more information, including: nutrition facts, recipes, graphics, and safe handling instructions.

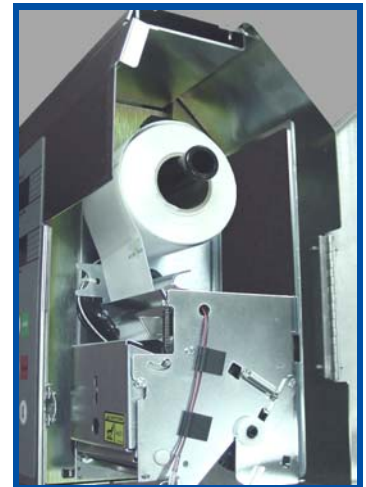

High Definition Thermal Label Printer

### Product Specifications

#### Overall Height:

36.6 in/93 cm

#### Overall Width:

16 in/40.6 cm

#### Overall Depth Indicator (only):

6.9 in/17.5 cm

#### Overall Depth w/Pan:

12.5 in/31.7 cm

#### Commodity Pan:

16 in x 12.5 in/40.6 cm x 31.7 cm

#### Weighing Capacities Available:

30 lb x 0.01 lb

15 kg x 0.005 kg

#### Finish:

Housing and Pan: Stainless Steel

#### Weight (Indicator and Pan):

38.55 lb/17.48 kg